
Specification

Model Name: AC 5024

Input Voltage	115 or 230 Vac by order specific
Input Frequency	47 ~ 63Hz
Max. In-rush Current	Cold start , 90A for 115 Vac , 150A for 230 Vac
Input Current	23.86A Max for 115 Vac 12.07A Max for 230 Vac
Output Voltage	29.2 Vdc ± 0.2 V (Absorption Charge) 13.7 Vdc ± 0.2 V (Float Charge)
Start Point of Floating	3A ± 0.2A
Max. Charging Current	50 A
Ripple / Noise	500mVp-p
FAN Control	Fan on fast running(Bulk / Absorption Charge) Fan on slow running(Float Charge)
LED Indication	LED1 : Green → Power on LED2 : Orange → Charging Off → Charged
Dimension	414.4 x 180 x 162 mm

Three Step of Charging & Charge Curve

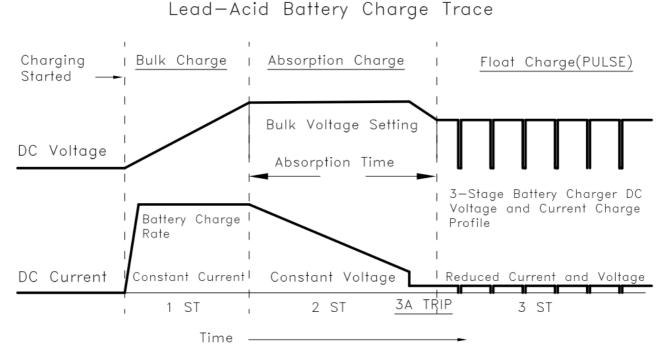

Step 1 : Bulk charge - bring batteries to 75% capacity fast.

During this stage charging occurs at full power, which means maximum current, until the battery voltage reached the set limit.

<u>Step 2 : Absorption Charge, boost</u> – slow the current flow, adjusting for maximum efficiency and gently topping off batteries.

During absorption charging the current decreases as the battery approached full charge.


Step 3 : Trickle Charge – for longer period, maintains fully charged batteries without harmful effects of over charging & cooking.

Trickle charge is intended to keep the battery in a fully charged state and compensates for self-discharge. When the current reaches setting point the battery switches to a maintenance charge at a constant voltage. Should the battery be in use and the charge current

Subsequently exceed setting point the charger will automatically return to the beginning of the three step charge characteristic.





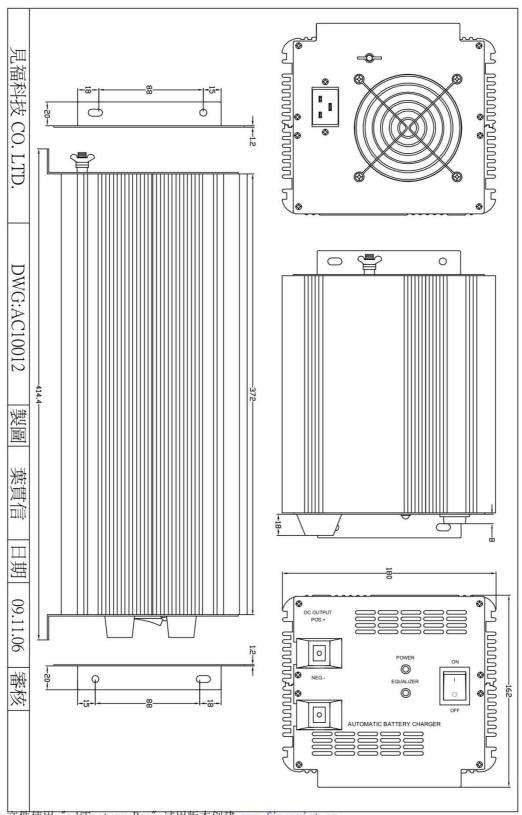

PDF 文件使用 "pdfFactory Pro" 试用版本创建 www.fineprint.cn